

## Repair instructions

Connect/disconnect battery  
Standard

KIA; NIRO I (DE); E-NIRO; kW: 150

---

### **General reference notes**


Switch off all electrical consumers.

Switch off ignition.

Setting and memory function of electric components may get lost by disconnecting the battery.

### **Component position**

Battery is located in the engine compartment  
front left side.

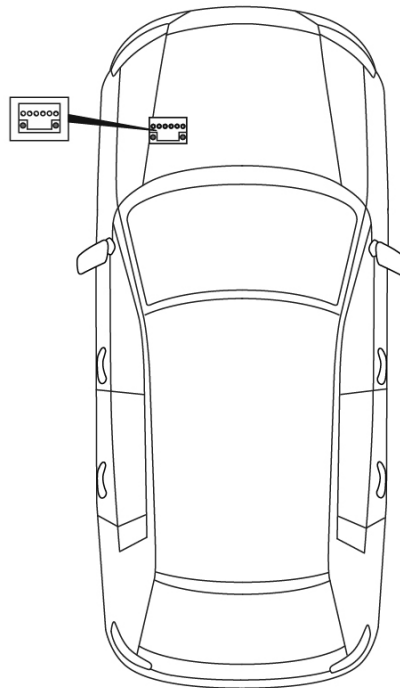

---

### **Before disconnecting the battery**

Note stored radio stations.

Switch off all electrical consumers.

### **Disconnect battery prior to working on the airbag system**

Switch off all electrical consumers.

Switch off ignition.

Disconnect battery (negative terminal).

Cover minus pole.

**Keep waiting time of min. 30 s.**

## **Connect battery after working on the airbag system**

Connect battery negative pole.  
Tighten battery negative pole.

## **Disconnect battery**

Switch off all electrical consumers.  
Switch off ignition.  
Disconnect battery (negative terminal).  
Cover minus pole.

## **Connect battery**

Connect battery negative pole.  
Tighten battery negative pole.

---

## **After connecting the battery**

Set time and date.  
Store noted radio stations.

### **Teach the window regulator**

Switch on ignition.  
Close side window and keep on pulling window regulator button for at least 1 s.  
**Teach-in process has been completed.**

### **Teach sunroof**

Switch on ignition.  
Close sunroof completely.  
Release sunroof switch.  
Press sunroof switch at least for 10 s in -close- position.  
Sunroof moves a short distance.  
Release switch.  
Press sunroof switch in position -close- and keep it depressed.

### **Teach-in process starts.**

Sunroof inner lining opens completely.  
Sunroof goes into lifting position.  
Sunroof is closing.  
Sunroof opens completely.  
Sunroof is closing.  
Sunroof inner lining closes completely.  
Release sunroof switch.

**Teach-in process has been completed.**

### **Vehicles with start-stop system**

Close boot lid, bonnet, and all doors.  
Switch on ignition.  
Switch off ignition.

**Vehicle must be kept locked for 4 h in order to initialize the start-stop system. The start-stop system will only be operative after at least 4 h and two engine starts if the battery has been disconnected.**

Repair/maintenance work have to be carried out by a specialist who has completed his training in the motor vehicle trade (e.g. car mechanic, car electrician, car mechatronics specialist). Alternatively, the repair can also be performed by a trained and experienced mechanic.